


# **TACMOLLE**

## PRODUCT INSTALLATION MANUAL

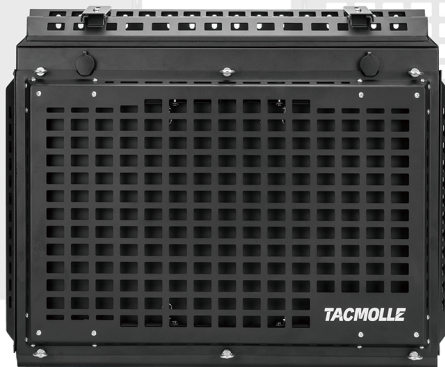

20037

# TACMOLLE



1. Open the lock cover on top of the storage box.



2. Insert the key (both keys can be used).



3. Turn to unlock.



4. Unlock both locks.





5. Open the storage box.



6. Remove the installation accessories.

# PACKAGE INCLUDED

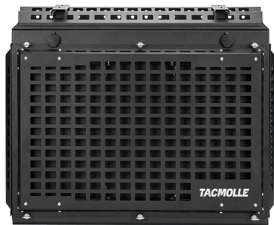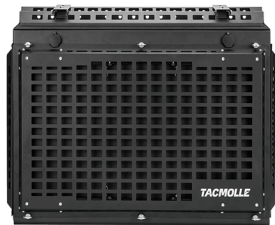

①



②



③



④



⑤

⑥



⑦




⑧

# INSTALLATION INSTRUCTIONS




1. Place the Driver Side (Left) storage box on a soft cushion and gather the required tools.

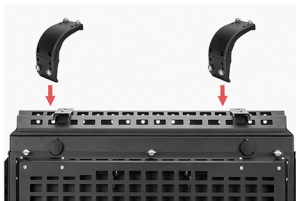

2. Install two ① on top of the box, ensuring the hooks face outward.



3. As shown, remove the two screws from the bottom of ①, then attach ① to the top of the box. Tighten the screws gently without fully securing. Install one ① in the leftmost hole and the other in the third hole from the right.

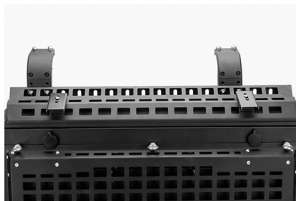

4. Driver Side assembly completed.




5. Prepare to install the bottom parts, ④ and ⑤.  
Note: ④ goes on the left side, and ⑤ goes on the right side.



6. Open the box and use ⑧ (screws, springs, and washers) to secure ④ and ⑤ to the bottom of the box, as shown.




# INSTALLATION INSTRUCTIONS

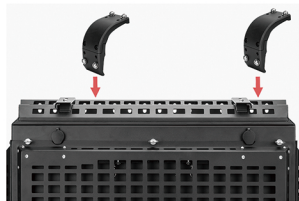

7. Prepare to install the Passenger Side (Right) storage box.



8. Use the same steps to attach ① to the top. As shown, install one ① in the rightmost hole and the other in the third hole from the left.

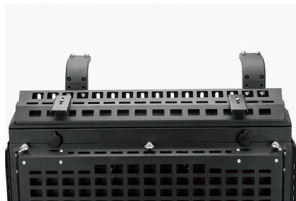

9. Passenger Side assembly completed.



10. Prepare to install the bottom parts, ⑥ and ④.  
Note: ⑥ goes on the left side, and ④ goes on the right side.



11. Open the box and use ⑧ (screws, springs, and washers) to secure ⑥ and ④ to the bottom of the box, as shown.




12. Completed assembly on both the Driver and Passenger sides.

# INSTALLATION INSTRUCTIONS



13. Prepare to install ③. Remove the original screws connecting the body to the roof.

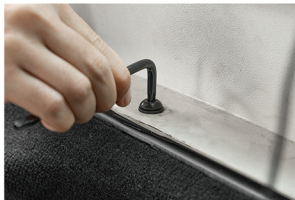

14. Use a tool to remove the six original screws and set them aside for reuse.



15. Slightly lift the Driver Side roof.



16. Place ③ between the roof and the body.



17. As shown, align the center hole of ③ on the left with the body mounting hole, and the right hole of ③ on the right with the body mounting hole. Then, check if the original screws can connect the parts.  
Note: Do not fully tighten the screws yet.



18. Completed assembly effect.

# INSTALLATION INSTRUCTIONS



19. Slightly lift the Passenger Side roof and place ③ between the roof and the body.




20. As shown, align the left hole of ③ on the left with the body mounting hole, and the center hole of ③ on the right with the body mounting hole. Then, check if the original screws can connect the parts.



21. Completed assembly effect.



22. After confirming that the four ③ are correctly positioned on both sides, reinstall and tighten the six original screws.

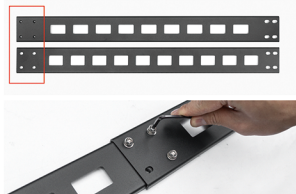

23. Remove the four screws attached to ②, then take out the internal extension part. Connect the two parts and tighten them. Ensure the correct holes, as shown.



24. Place the two assembled ② on the roof.

# INSTALLATION INSTRUCTIONS



25. As shown, slightly adjust the position of ② and prepare to install the boxes.



26. Hang the Driver Side box in its corresponding position.



27. Use ⑦ (screws, springs, and washers) to connect ④ and ⑤ to ③ and tighten them. Note: Only one screw is needed to secure ⑤.



28. Remove the two screws attached to the top of ① and prepare to connect ① to ② on the roof.



29. As shown, determine the correct hole for connection based on the body width, then tighten the screws.



30. Driver Side box installation completed.

# INSTALLATION INSTRUCTIONS



31. Follow the same steps to install the Passenger Side box.



32. Use ⑦ (screws, springs, and washers) to connect ⑥ and ④ to ③ and tighten them. Note: Only one screw is needed to secure ⑥.



33. Connect ① to ② on the roof.



34. Passenger Side box installation completed.




35. Once both boxes are properly installed, tighten all screws. Finally, shake the boxes firmly to ensure proper installation.



36. Installation of both storage boxes is complete.

# INSTALLATION INSTRUCTIONS

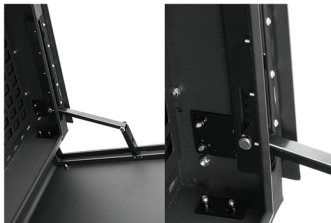

1. Open the storage box lid and adjust the support hinge to the desired worktable angle by placing it in the corresponding slot.



2. Adjust the worktable to the appropriate angle to ensure items won't fall off.




3. Demonstration of the open worktable.




4. Lift up the two folding support hinges to fold up the worktable.



# DETACHABLE TABLE USER GUIDE

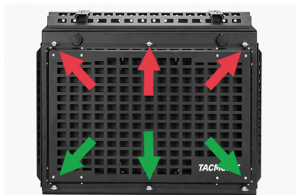


1. First, loosen the three bottom screws (green arrows) without fully unscrewing them, then unscrew the three top screws (red arrows).

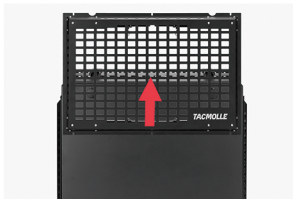

2. Lift the table upwards and remove it.



3. To open the table legs, pull the round ring latch while lifting the legs.

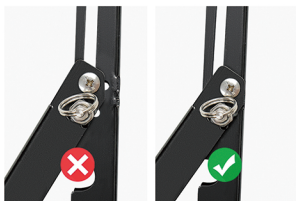

4. Note: After lifting the legs, ensure the heels are securely locked in the "L"-shaped slot (see right picture).



5. Table in the open state.



6. To close the table legs, pull the round ring latch while pushing the legs backward to release the wheels from the "L"-shaped slot. Then push the legs forward and release the latch when the legs are fully closed.

# PRODUCT DEMONSTRATION





***TACMOLLE***